

PARTS LIST

DAS Series – Dirt & Air Separators

Item Name	Description	Model	Part No.
Replacement Cartridge (Removable head option only)	Coalescing medium used to remove air and direct dirt particles to bottom chamber	DAS-2-RC	574560-001
		DAS-2.5-RC	574560-002
		DAS-3-RC	574560-003
		DAS-4-RC	574560-004
		DAS-5-RC	574560-005
		DAS-6-RC	574560-006
		DAS-8-RC	574560-007
		DAS-10-RC	574560-008
		DAS-12-RC	574560-009
		DASH-2-RC	574570-001
		DASH-2.5-RC	574570-002
		DASH-3-RC	574570-003
		DASH-4-RC	574570-004
		DASH-5-RC	574570-005
		DASH-6-RC	574570-006
		DASH-8-RC	574570-007
DASH-10-RC	574570-008		
DASH-12-RC	574570-009		
Shell Assembly	Dirt Air Separator body	ITEM IS NOT REPLACEABLE	
Air Vent	Air relief valve used to release air at the top of the unit	AVA-050 / AVA - 1/2"	272005-303
Skim Valve (Standard ball valve)	Skim valve used to remove floating debris and large amounts of air during start-up	ABV-050	574570-010
Blow-down Valve (Standard ball valve)	Blow valve used to discharge dirt collected in the bottom chamber	ABV-050	574570-010

S. A. Armstrong Limited
 23 Bertrand Avenue
 Toronto, Ontario
 Canada, M1L 2P3
 T: (416) 755-2291
 F (Main): (416) 759-9101

Armstrong Pumps Inc.
 93 East Avenue
 North Tonawanda, New York
 U.S.A. 14120-6594
 T: (716) 693-8813
 F: (716) 693-8970

Armstrong Holden Brooke Pullen
 Wenlock Way
 Manchester
 United Kingdom, M12 5JL
 T: +44 (0) 1612 232223
 F: +44 (0) 1612 209660

