

ARMSTRONG

FLO-TREX VALVES MODEL FSA


FILE NO.: 6035.22
DATE: Sept. 15, 1989
SUPERSEDES:
DATE:

SERVICE PARTS


PART DESCRIPTION	MODELS			
	FSA-1½	FSA-2	FSA-2½	FSA-3
INDICATOR PIN	516836-007	516836-007	516836-008	516836-008
STEM	516792-000	516792-000	516799-000	516799-000
COVER	503196-002	503196-002	503197-002	503197-002
COVER GASKET	205142-002	205142-002	205142-003	205142-003
GLAND NUT	205177-000	205177-000	205177-000	205177-000
PACKING RING	205178-000	205178-000	205178-000	205178-000
DISC	204987-041	204987-041	204988-041	204988-041
BODY W/ SEAT	217020-011	217022-011	216235-011	216237-001
FLANGE	—	105210-011	105189-011	105188-011
FLANGE GASKET ONLY	—	805209-000	805201-000	805201-000
FLANGE BOLT & NUT	—	½-13 x 2¼	½-13 x 2½	½-13 x 2½

NOTES:

1. Purchase NPT body plug and flange hardware locally.

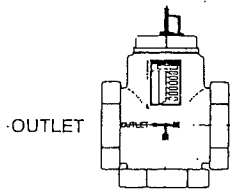

1½ FSA

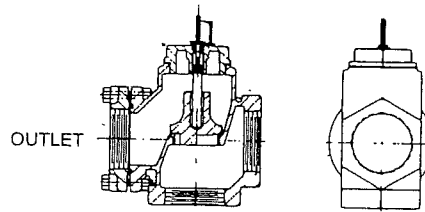

2, 2½ & 3 FSA

OPERATION INSTRUCTIONS

For use as a check, balancing and shut-off valve on the discharge side of a centrifugal pump.

FSA Flo-Trex valves may be installed in a horizontal run of pipe or as an angle valve above the pump.

The calibrated valve stem allows for adjustment and resetting to the desired flow conditions.

FSA valves may be re-packed under full pressure. Accomplish this by opening the valve all the way so the stem and cover seats are both closed. Remove the gland nut, pry out the old packing. Clean out the gland recess and install new packing ring. Tighten the gland nut down until tension is felt.

S.A. Armstrong Limited
23 Bertrand Avenue
Toronto, Ontario
Canada, M1L 2P3
Tel: (416) 755-2291
Fax: (416) 759-9101

Armstrong Pumps Limited
Peartree Road, Stanway
Colchester, Essex
United Kingdom, CO3 5JX
Tel: 01206-579491
Fax: 01206-760532



Armstrong Pumps Inc.
93 East Avenue
Buffalo, New York
U.S.A. 14120-6594
Tel: (716) 693-8813
Fax: (716) 693-8970
1-800-FLOW-845

Armstrong Darling Inc.
2200 Place Transcanadienne
Montreal, Quebec
Canada, H9P 2X5
Tel: (514) 421-2424
Fax: (514) 421-2436
Printed in Canada

