

DEPM OUTDOOR LCD AND DRIP COVER | INSTALLATION AND OPERATING INSTRUCTIONS

File No: 100.8170
Date: JULY 06, 2021
Supersedes: NEW
Date: NEW

THIS PROCEDURE DESCRIBES THE STEPS TO INSTALL LCD AND DRIP COVER FOR DEPM PUMPS.

Touchscreen Cover Installation

Step 1: Clean the area around the LCD opening of the motor cover using isopropyl alcohol. Make sure the surface is free of oil, lint, or debris.



Step 2: Remove the lining paper from the back of the LCD cover. Place door over the cover and align center to the touchscreen display. Press along the perimeter of the frame to ensure the double-sided tape is adhering to the cover.




Step 3: Touchscreen cover installation complete.




Drip Cover Installation

Step 1: Stop Motor. Before removing the cover, the system must be disconnected from the mains supply. After switching off, wait for at least 15 minutes for the capacitors to discharge before opening the covers.

Step 2: Remove cover-cap from the front cover.

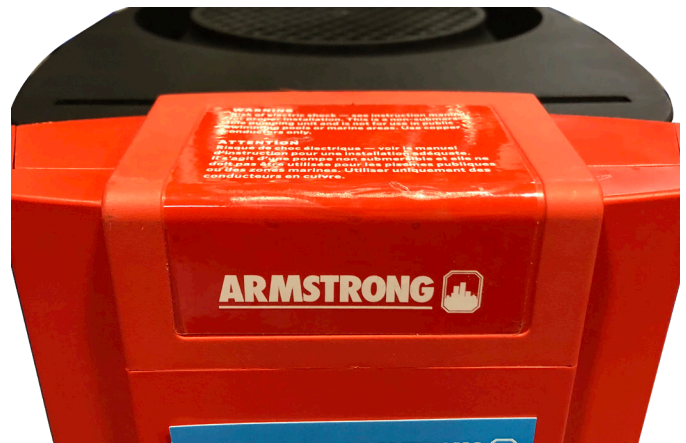

Step 3: Remove screw securing the fan cover as shown. Remove the fan cover from the pump.

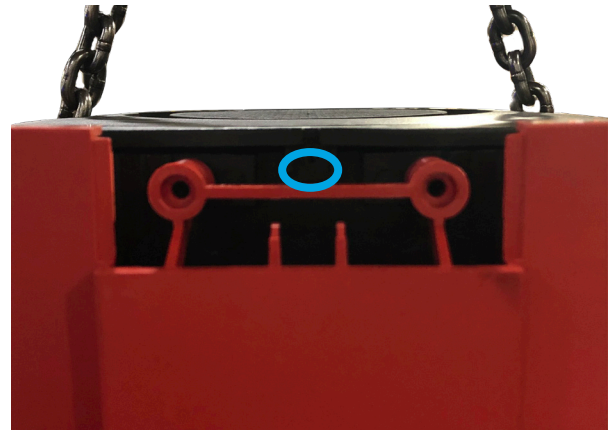

Step 4: Install the fan cover with drip cover to the pump. Secure with screw and re-install the cover cap.

Step 5: Reconnect power and resume normal operations.

TORONTO

23 BERTRAND AVENUE
TORONTO, ONTARIO
CANADA, M1L 2P3
+1 416 755 2291

BUFFALO

93 EAST AVENUE
NORTH TONAWANDA, NEW YORK
U.S.A., 14120-6594
+1 716 693 8813

DROITWICH SPA

POINTON WAY,
STONEBRIDGE CROSS BUSINESS PARK
DROITWICH SPA, WORCESTERSHIRE
UNITED KINGDOM, WR9 0LW
+44 8444 145 145

MANCHESTER

WOLVERTON STREET
MANCHESTER
UNITED KINGDOM, M11 2ET
+44 8444 145 145

BANGALORE

#59, FIRST FLOOR, 3RD MAIN
MARGOSA ROAD, MALLESWARAM
BANGALORE, INDIA, 560 003
+91 80 4906 3555

SHANGHAI

UNIT 903, 888 NORTH SICHUAN RD.
HONGKOU DISTRICT, SHANGHAI
CHINA, 200085
+86 21 5237 0909

SÃO PAULO

RUA JOSÉ SEMIÃO RODRIGUES AGOSTINHO,
1370 GALPÃO 6 EMBU DAS ARTES
SAO PAULO, BRAZIL
+55 11 4785 1330

LYON

93 RUE DE LA VILLETTE
LYON, 69003 FRANCE
+33 4 26 83 78 74

DUBAI

JAFZA VIEW 19, OFFICE 402
P.O.BOX 18226 JAFZA,
DUBAI - UNITED ARAB EMIRATES
+971 4 887 6775

MANNHEIM

DYNAMOSTRASSE 13
68165 MANNHEIM
GERMANY
+49 621 3999 9858

JIMBOLIA

STR CALEA MOTILOR NR. 2C
JIMBOLIA 305400, JUD.TIMIS
ROMANIA
+40 256 360 030

ARMSTRONG FLUID TECHNOLOGY
ESTABLISHED 1934

ARMSTRONGFLUIDTECHNOLOGY.COM

FOR SERVICE RELATED PARTS & KITS

Use ADEPT Select to quickly and easily select.

Visit adept.armstrongfluidtechnology.com to learn more

